myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-W310. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-W310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SONY CYBER-SHOT DSC-W310**
**User guide SONY CYBER-SHOT DSC-W310**
**Operating instructions SONY CYBER-SHOT DSC-W310**
**Instructions for use SONY CYBER-SHOT DSC-W310**
**Instruction manual SONY CYBER-SHOT DSC-W310**

SONY

# Digital Still Camera

Operating Instructions

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-P92

Serial No. _____

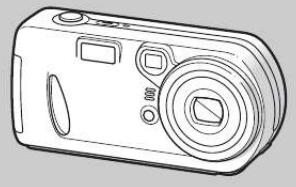

Cyber-shot

MEMORY STICK ™

**DSC-P92**

© 2003 Sony Corporation

3-082-719-**11**(1)

**Getting started** _____
**Shooting still images** _____
**Viewing still images** _____
**Deleting still images** _____
Before advanced operations _____
Advanced still image shooting _____
Advanced still image viewing _____
Still image editing _____
Enjoying movies _____
Enjoying images on your computer _____
Troubleshooting _____
Additional information _____
Index _____

Your user manual
SONY CYBER-SHOT DSC-W310

***Manual abstract:***

*· Do not use the camera near a TV, radio, or tuner. This may cause noise to interfere the camera. Precaution on copyright Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws. The power zoom lens This camera is equipped with power zoom lens. Be careful not to bump the lens, and be careful not to apply force to it. 4 The pictures used in this manual The photographs used as examples of pictures in this manual are reproduced images, and are not actual images shot using this camera. Trademarks · "Memory Stick," , and "MagicGate Memory Stick" are trademarks of Sony Corporation. · "Memory Stick Duo" and are trademarks of Sony Corporation. · "Memory Stick PRO" and are trademarks of Sony Corporation.*
*· "MagicGate" and are trademarks of Sony Corporation. · Microsoft and Windows are registered trademarks of the U.S. Microsoft Corporation in the United States and other countries. · Macintosh, Mac OS, QuickTime, iBook, and Power Mac are trademarks or registered trademarks of Apple Computer, Inc.*
*· "Pentium" is a trademark or a registered trademark of Intel Corporation. · In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the TM or ® marks are not used in all cases in this manual. 5 Table of contents Before using your camera . 4 Identifying the parts 8 Viewing still images Viewing images on the LCD screen of your camera 32 Viewing images on a TV screen.*
*34 Getting started Preparing batteries 10 Charging the batteries . 10 Inserting the batteries 12 Using an external power source 15 Using your camera abroad 15 Turning your camera on/off 16 How to use the control button. 16 Setting the date and time. 17 Deleting still images Deleting images 36 Formatting a "Memory Stick" 40 Before advanced operations How to setup and operate your camera 41 Changing menu settings . 41 Changing items in the SET UP screen 41 Deciding the still image quality 42 Creating or selecting a folder . 42 Creating a new folder . 43 Selecting the recording folder 43 Shooting still images Inserting and removing a "Memory Stick" 19 Setting the still image size 20 Image size and quality 21 Basic still image shooting using auto mode. 22 Checking the last image shot Quick Review 24 Using the zoom feature. 25 Shooting close-ups Macro . 26 Using the self-timer 27 Selecting a flash mode 28 Shooting with the finder .*

*30 Inserting the date and time on a still image 31 Adjusting color tones White Balance.48 Adjusting the flash level Flash Level.49 Shooting multiple frames Clip Motion .49 Shooting in Multi Burst mode Multi Burst.51 Shooting three images in succession Burst 3 .51 Shooting still images for e-mail E-Mail52 Shooting still images with audio files Voice53 Shooting according to scene conditions 54 Adding special effects Picture Effect .56 Advanced still image viewing Selecting the folder and playing back images Folder 57 Enlarging a portion of a still image.58 Enlarging an image Playback zoom.58 Recording an enlarged image Trimming .59 Playback successive images Slide show .*
*59 Rotating still images Rotate .60 Advanced still image shooting Choosing a focus method . 44 Setting the distance to the subject Focus preset 45 Adjusting the exposure EV adjustment. 46 Selecting a metering mode . 47 6 Playing back images shot in Multi Burst mode .*
*61 Playing back continuously 61 Playing back frame by frame Jog playback 61 Enjoying images on your computer Copying images to your computer For Windows users 74 Installing the USB driver 75 Installing "Image Transfer" 76 Installing "ImageMixer"..*

Your user manual
SONY CYBER-SHOT DSC-W310